
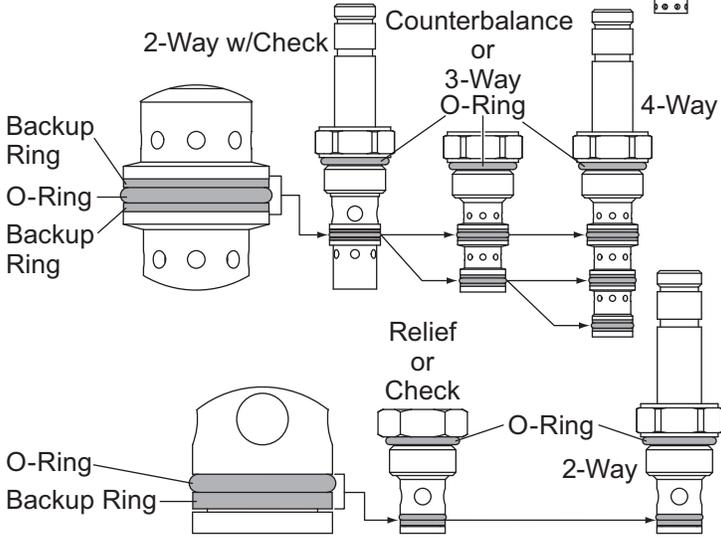


COIL/CARTRIDGE SEAL KIT INSTRUCTIONS

Excessive torque will damage and affect performance of cartridge.



Lubricate seals with recommended hydraulic fluid before installation.

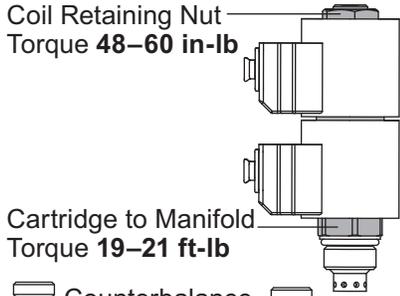

COIL/CARTRIDGE SEAL KIT INSTRUCTIONS

Excessive torque will damage and affect performance of cartridge.



Lubricate seals with recommended hydraulic fluid before installation.

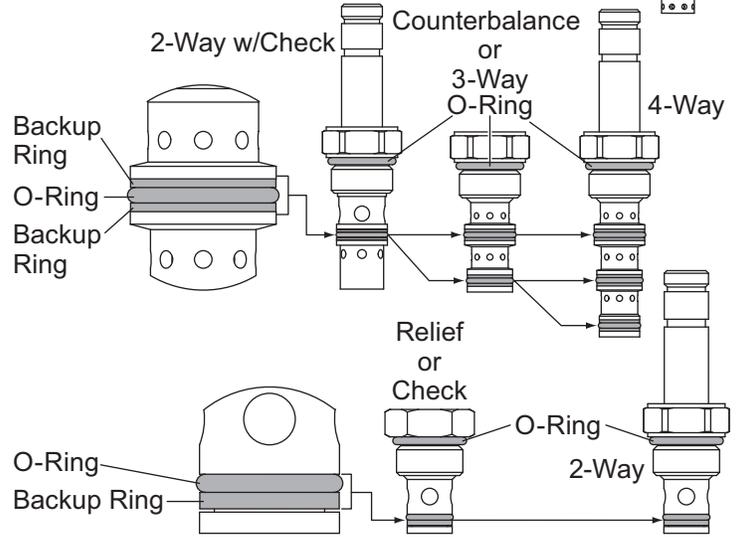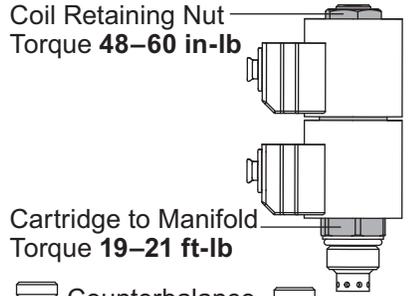

COIL/CARTRIDGE SEAL KIT INSTRUCTIONS

Excessive torque will damage and affect performance of cartridge.

Lubricate seals with recommended hydraulic fluid before installation.

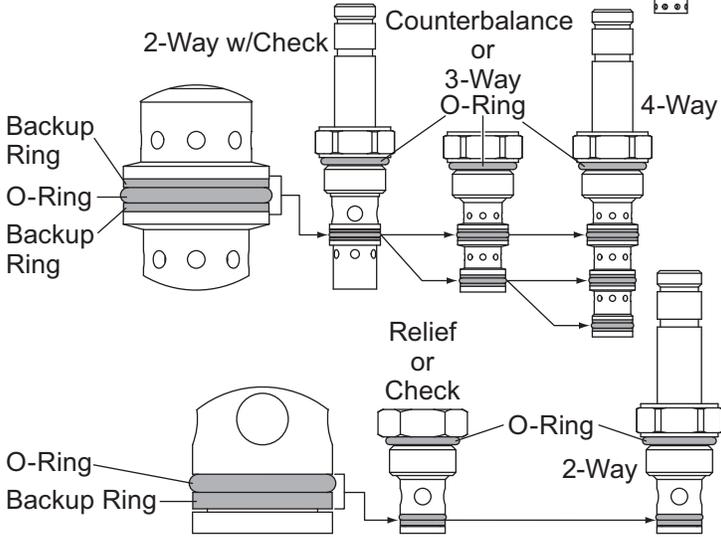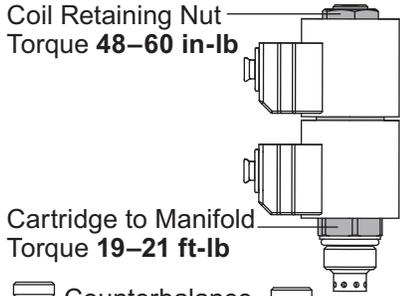

COIL/CARTRIDGE SEAL KIT INSTRUCTIONS

Excessive torque will damage and affect performance of cartridge.

Lubricate seals with recommended hydraulic fluid before installation.

