


# 69826 Relay Adapter Kit


## Installation Instructions

1. Connect one black 4-position adapter connector to the 4-position connector from the plug-in harness.
2. Connect the second black 4-position adapter connector to the 4-position connector from the vehicle control harness.
3. Splice the plug-in harness wire marked "PARK" to the green wire from the adapter using the insulated splice supplied on the adapter wire.
4. Splice the brown wire from the adapter into the vehicle park wire, following the splicing procedure outlined in the Installation Instructions for the plug-in harness kit.
5. Using a hot-air source, starting at the center of the first splice and working to either side, apply heat until the tubing recovers and glue can be seen around the edges. Repeat for the second splice.
6. Allow the tubing to cool before handling.

### Typical 2-Plug, 3-Port Module System

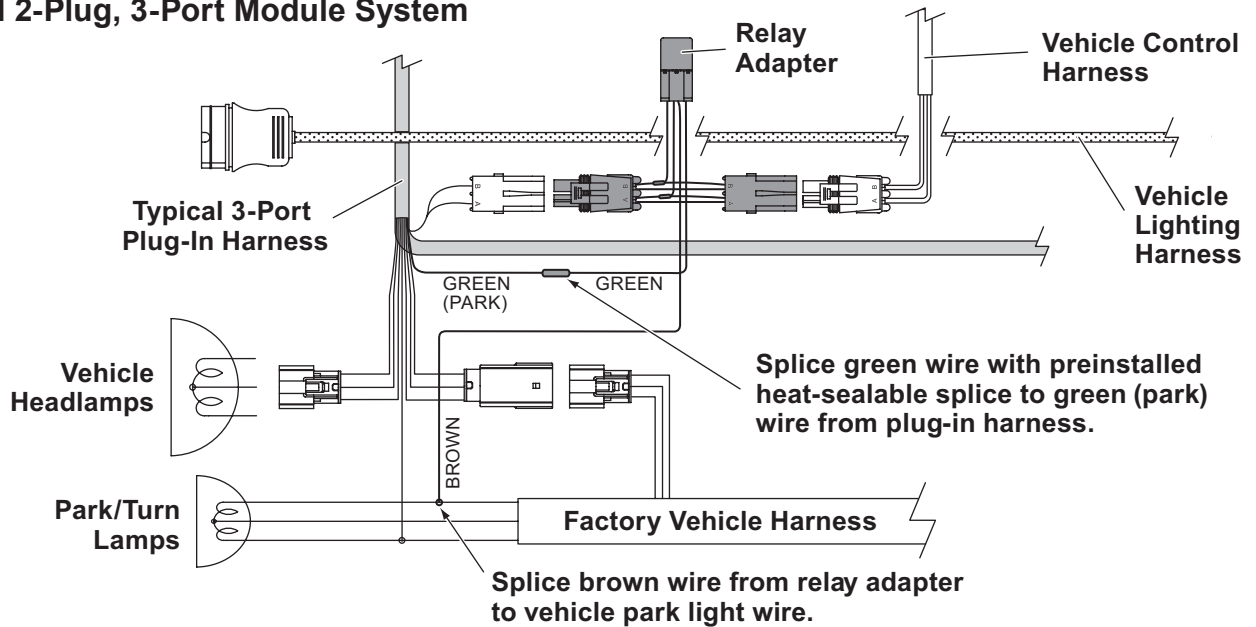

### Typical 3-Plug, 3-Port Module System

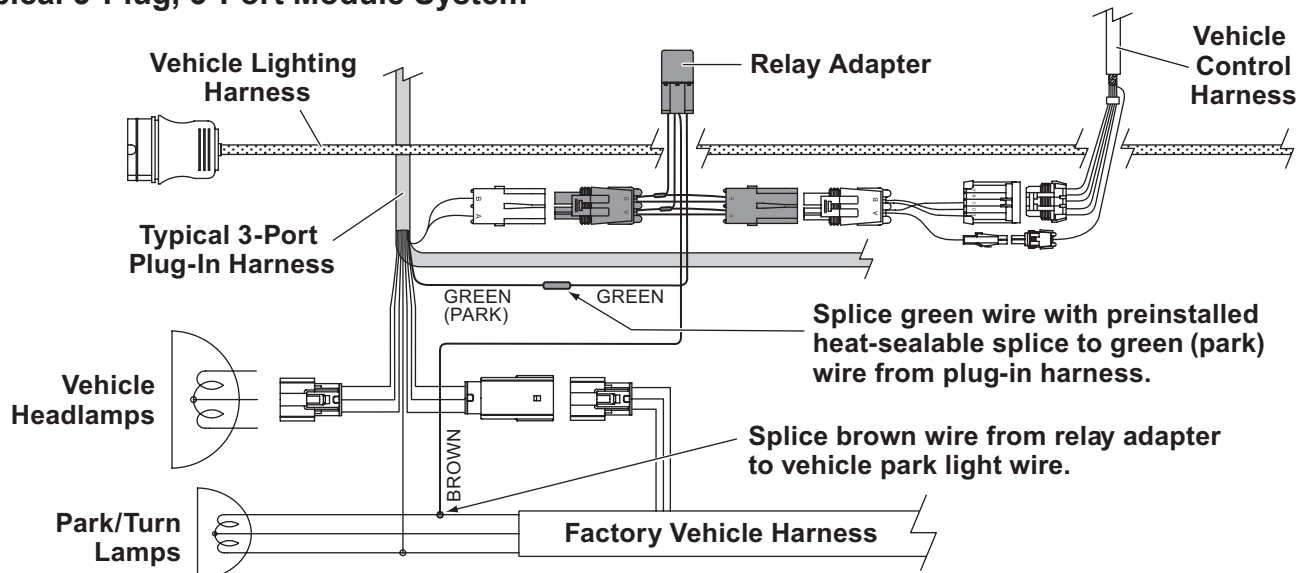

The company reserves the right under its product improvement policy to change construction or design details and furnish equipment when so altered without reference to illustrations or specifications used. This equipment manufacturer or the vehicle manufacturer may require or recommend optional equipment for snow removal. Do not exceed vehicle ratings with a snowplow. The company offers a limited warranty for all snowplows and accessories. See separately printed page for this important information.

**Printed in U.S.A.**

---