

Control Tee Adapter Kit

Installation Instructions

This adapter kit is intended for relay systems only.


1. Connect the adapter as shown.

⚠ CAUTION

Connect black wires from adapter to relay terminal 85. Reversing this connection will damage the internal relay diode, causing the relay to be inoperable.

2. Connect the black wires from the adapter to relay terminal 85.
3. Connect the wire with the 15-amp fuse from the vehicle control harness to relay terminal 87.

4. Connect supplied RED wires to relay terminals 30 and 86.
 5. The RED wire connected to relay terminal 30 should be connected to an under dash 12-volt source (battery voltage) capable of supplying 15 amps.
- If needed, extend the wire to reach the POSITIVE + terminal of the battery. The extended wire will need to be protected by a 20-amp in-line fuse (not supplied).
6. The RED wire connected to relay terminal 86 should be connected to a switched 12-volt source (+12V when vehicle ignition is ON, 0V when vehicle ignition is OFF.)

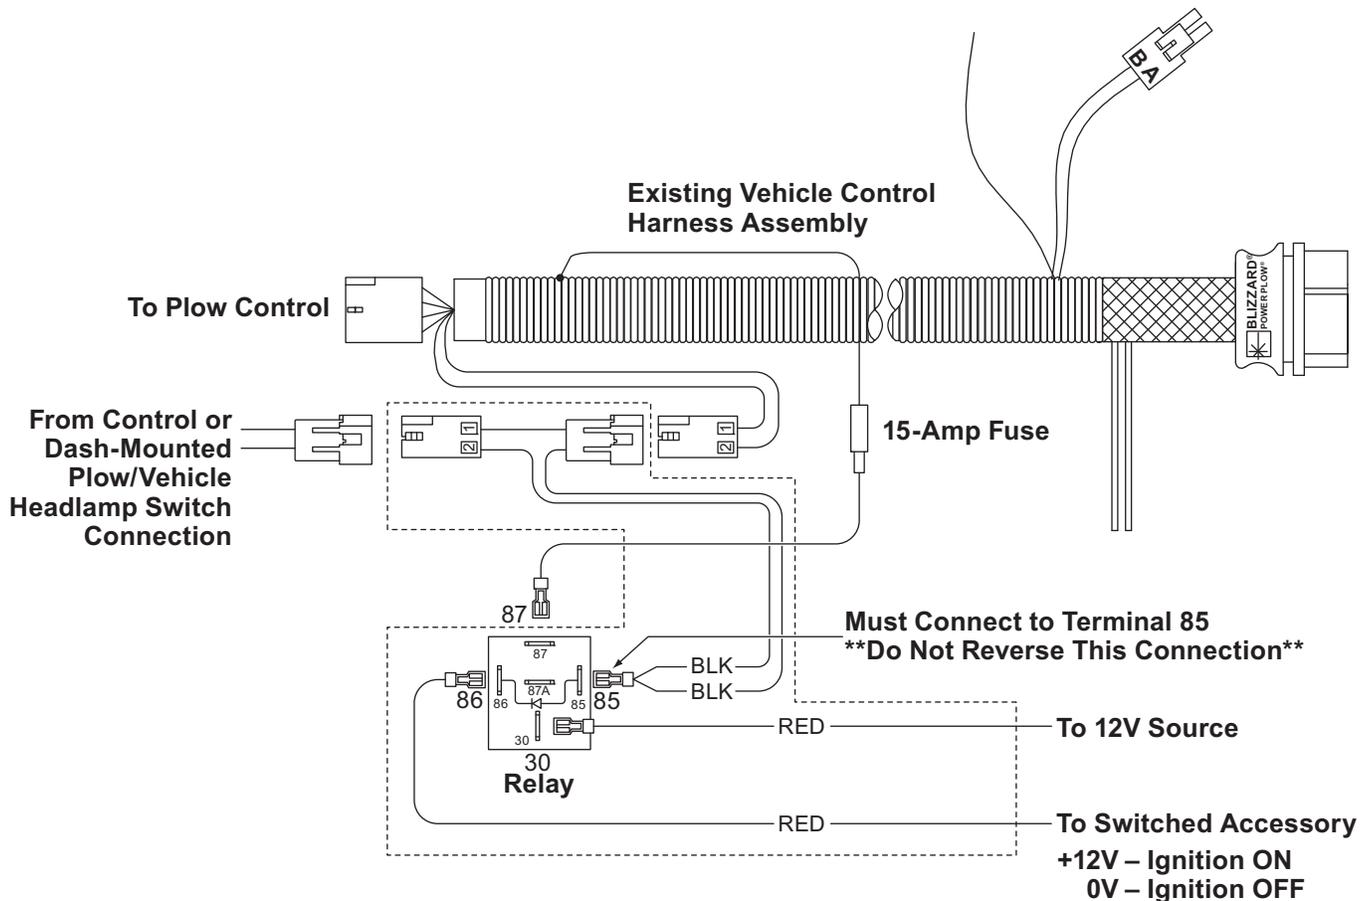

Blizzard reserves the right under its product improvement policy to change construction or design details and furnish equipment when so altered without reference to illustrations or specifications used. Blizzard or the vehicle manufacturer may require or recommend optional equipment for snow removal. Do not exceed vehicle ratings with a snowplow. Blizzard offers a limited warranty for all snowplows and accessories. See separately printed page for this important information. The following is a registered (®) trademark of Douglas Dynamics, L.L.C.: BLIZZARD®.

Printed in U.S.A.
