
69826-1 Relay Adapter Kit

Installation Instructions


- Connect one black 4-position relay adapter connector to the 4-position connector from the plug-in harness.
- Connect the second black 4-position relay adapter connector to the 4-position connector from the vehicle control harness.
- Splice the plug-in harness wire marked "PARK" to the green wire from the relay adapter using the insulated splice supplied on the adapter wire.
- Splice the brown wire from the relay adapter into the vehicle PARK wire, following the splicing procedure outlined in the Installation Instructions from the plug-in harness kit.
- 5. Splice the plug-in harness wire marked "TURN" to the gray wire from the relay adapter using the insulated splice supplied on the adapter wire.
- Splice the light blue wire from the relay adapter into the vehicle TURN wire following the splicing procedure outlined in the Installation Instructions from the plug-in harness kit.

- On the passenger's side, route both violet and blue wires from the relay adapter along the plug-in harness to the area near the plug-in harness headlamp connectors, taping the wire to the harness as required.
- 8. Splice the plug-in harness wire marked "TURN" to the violet wire from the adapter using the insulated splice supplied on the adapter wire.
- Splice the blue wire from the adapter into the vehicle TURN wire, following the splicing procedure outlined in the Installation Instructions from the plug-in harness kit.
- 10. Using a hot-air source, starting at the center of the first splice and working to either side, apply heat until the tubing recovers and glue can be seen around the edges. Allow the tubing to cool before handling. Repeat for the other splices.

Typical 2-Plug, 3-Port Module System

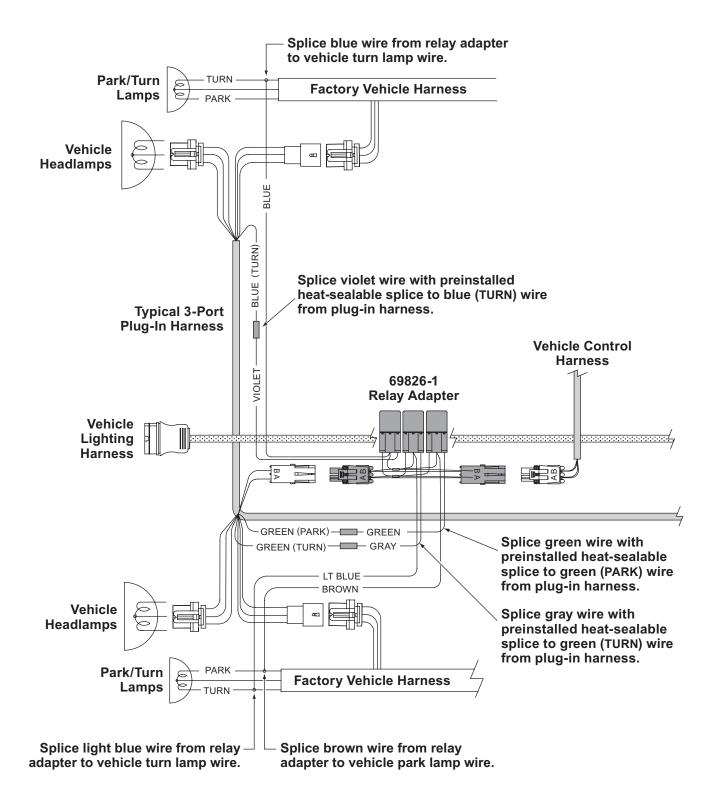

Typical 3-Plug, 3-Port Module System

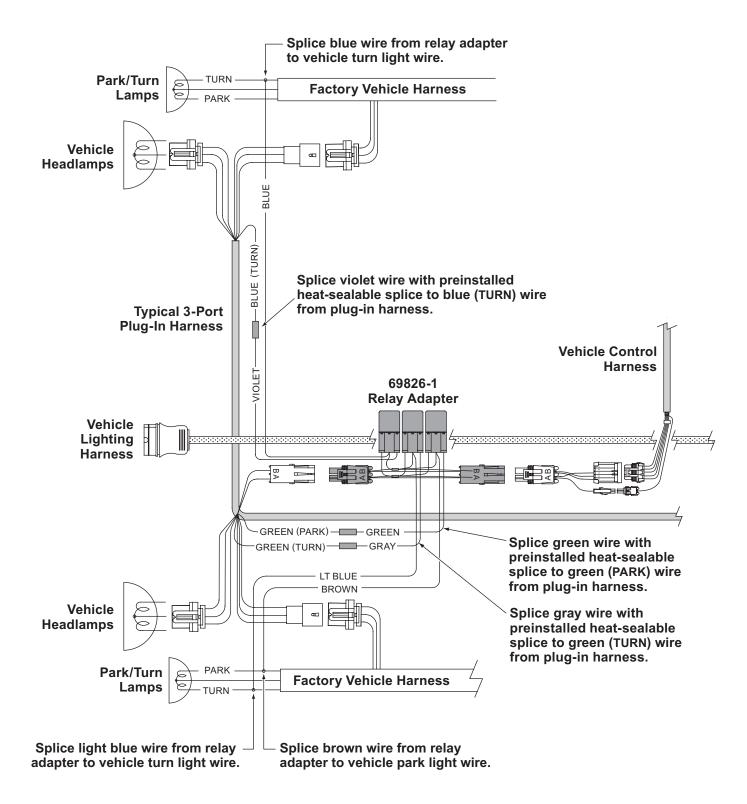

The company reserves the right under its product improvement policy to change construction or design details and furnish equipment when so altered without reference to illustrations or specifications used. This equipment manufacturer or the vehicle manufacturer may require or recommend optional equipment for snow removal. Do not exceed vehicle ratings with a snowplow. The company offers a limited warranty for all snowplows and accessories. See separately printed page for this important information.

Printed in U.S.A.